



Customer and Market Operations
EMEA Customer Care

Service Bulletin No. SB-007/22.02.05

RM-14


DISASSEMBLY INSTRUCTIONS FOR SLIDE COVER

If the slide cover needs to be disassembled e.g. for IMEI check, please follow the below described instructions.

1. Use the SIM tray tool to open the SIM holder.



2. Open the slide cover

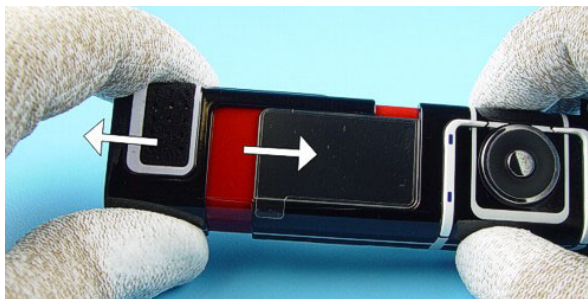

3. Use the SRT-6 as a lever to remove the slide cover.



NOKIA

4. First shift the slide cover as far as it will go and then remove it from its guide

